

# Chest Freezer Instructions



## Contents Page

Safety Instructions . . . . .	2
General Description . . . . .	2
Starting Up . . . . .	2
Troubleshooting. . . . .	3
Packing Down . . . . .	3
Emergency Info . . . . .	3

## Safety Information

***Please read carefully the following information regarding safety.***



It is important, that everyone who are to use or install the product, to have access to this manual.



This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



Children should be supervised to ensure that they do not play with the appliance.



The product contains components with software.  
Gram Commercial has taken measures to ensure, that the software is free of errors, and that the software has been developed according to IEC 60601-1-4 (software in medical products).

This implies a risk analysis, which shows a small remnant of risk that unwanted/unintended operation might occur under certain conditions.

According to the above rules, it should be informed/considered if a necessary risk analysis should be carried through on the partial machine. More details of the remnant risk can be supplied by Gram Commercial if necessary.



The appliance might contain parts with sharp edges in the compressor compartment, and in the inside compartment.



The appliance is not to be transported on a sack truck, there is a danger of loosing the balance, causing danger to persons.



Do not pull the power cord to dicconnect the appliance, or when moving the appliance.

## General Description

Oxford Event Hire's Chest Freezer is ideal for storing food and drink at any event. We would specifically recommend it for storing foodstuffs and ice.

## Starting up

Connect the cabinet to main power supply.

Allow no less than 5 hours to allow freezer to adjust to correct temperature.

**Note:** If the unit has not been stored or moved in an upright position, let it stand upright for approximately 12 hours before operation. If in doubt allow to stand. Avoid positioning the appliance in direct sunlight or damp areas.

## Troubleshooting

The warning light will come on when:

- The freezer is switched on.
- The lid has been left open for a while, such as when loading, re-arranging or taking out food.
- Freezing large amounts of food.
- There has been a lengthy interruption to the power supply.

## Packing Down

When you have finished with your Chest freezer, please do the following:

- Please remove all freezer contents, prior to collection.
- Switch off, unplug and allow the display to defrost for 6 hours.
- Leave door open to maximize defrosting process.

**If you have any queries or problems please email  
[sales@oxfordeventhire.co.uk](mailto:sales@oxfordeventhire.co.uk) or phone **01865 760158**.**

**We hope that our *Chest Freezer* helps to make your event a success.  
Please note that you can return the item to us dirty.**