

OXFORD
EVENT HIRE
TABLES CHAIRS & CATERING EQUIPMENT

Electric Water Boiler Instructions









Contents Page

Safety Instructions	2
General Description	2
Starting Up	2
Troubleshooting	2
Packing Down	3
Emergency Info	3

Safety Information

Please carefully read the following information regarding safety:

-  Place on a flat, even surface.
-  Ensure the surface is capable of holding the weight of the full percolator.
-  Do not open the lid while liquid is boiling.
-  Do not touch any surface of the boiler while the content is being heated.
-  Do not immerse the unit in water.
-  Not suitable for outdoor use.

General Description

Oxford Event Hire's Electric Water Boiler is 27 litres, serving an average of 100 cups of coffee or heated water for a variety of drinks. The boilers are electrically powered for ease of use and look the part in social and professional events.

Starting up

To start using the water Boiler, please follow the below instructions:

- Connect the cabinet to main power. The lights will show when the system is connected.
- Fill up the tank with water, do not exceed the maximum content level.
- Turn up the temperature control knob to full heat.
- Allow up to 2 hours for a full tank to heat fully.
- Once the contents are hot, adjust the temperature control knob to get the desired heat.

Troubleshooting

If the appliance fails to work:

- Ensure you have pressed the reset button (on underside of boiler), see photo below.





- Ensure only one electrical appliance is plugged into each 13 amp spur/wall socket. Do not use a domestic extension lead.
- If an electrical item has been plugged into a wall socket which was switched on, it may fuse the 13 amp plug.
- Confirm you have a 240v, 13 amp power supply to the outlet spur by testing with an electrical appliance which you know works.

Packing Down

When you have finished with your Water Boiler, please do the following:

- Switch off, unplug and allow to cool down.
- Please remove all contents before collection.

**If you have any queries or problems please email
sales@oxfordeventhire.co.uk or phone **01865 760158**.**

**We hope that our *Electric Water Boiler* helps to make your event a success.
Please note that you can return the item to us dirty.**

