

Patio Heater

Instructions











Contents Page

Safety Instructions	2
General Description	2
Starting Up	3
Packing Down	4
Troubleshooting	4
Emergency Info	5


Safety Information

Please carefully read the following information regarding safety:

-  Handle the heater gently.
-  Whilst in operation, parts of the appliance will become hot, so take care to avoid accidental burns.
-  This appliance is designed for outdoor use.
-  The appliance should be sited on a level surface in a suitable position to minimise the possibility of accidental touching.
-  For use outdoors or in amply ventilated areas.
-  An amply ventilated area must have a minimum of 25 % of the surface area open.
-  Never operate heater in an explosive atmosphere like in areas where gasoline or other flammable liquids or vapors are stored.
-  To protect heater from strong wind, anchor the base securely to the ground with screws.

General Description

Oxford Event Hire's Patio Heater is perfect for warming up those evening parties and celebrations. These patio heaters work as a heat deflector, so the top gets warm, but not hot, warming an radius of 3m around. They can be used under cover, but you need to ensure you maintain a minimum clearance of 1.5 meters all round.

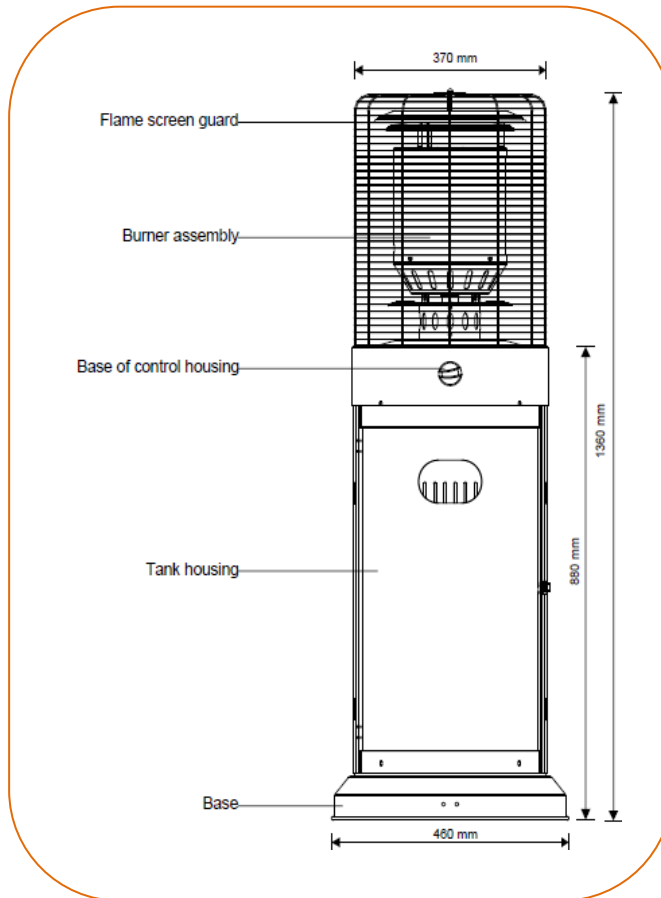

Starting up

To start using the Patio Heater please follow the below instructions:

- Depress and turn control knob clockwise to OFF position.
- Fully open gas valve.
- Depress control knob and turn knob counter-clockwise to IGNITE position, then to PILOT position (you will hear 2 clicks).
- With the pilot light lit, keep control knob depressed for 30 seconds.

NOTE: If the pilot light has not ignited, turn heater control knob to OFF position, fully close gas valve, wait 5 minutes, then repeat steps 2–4 of the Lighting Instructions.


NOTE: If the pilot light ignites but does not stay lit, turn heater control knob to OFF position, fully close propane gas valve, wait 5 minutes, then repeat steps 2–3. Now, using a lighter, ignite the pilot light through the ignition hole on the emitter screen. Once the pilot light is lit, depress control knob for 30 seconds.

- After depressing the control knob for 30 seconds, turn control knob to LOW. To increase the temperature, turn towards HIGH.

Packing Down

When you have finished with your Patio Heater please do the following:

- Fully close gas valve.
- Turn control knob clockwise to OFF position.

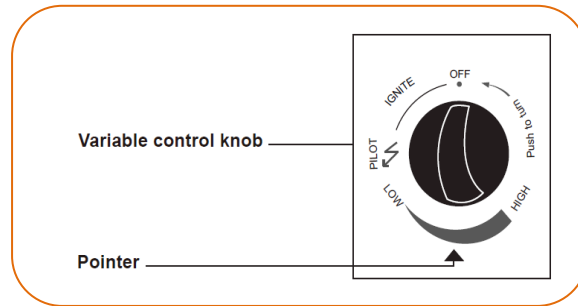

Troubleshooting

Here are the most common problems people may encounter along with the simple solutions on how to fix them:

Why will my pilot light not ignite?

There are a number of reasons that might explain this:

- *No gas* – Ensure the gas bottle is correctly fitted and turned on.
- *There may be air in the pipes* – click the ignition button and hold down to expel the air. The hole that the gas comes through is very small so please be patient as it may take up to 1 minute.
- *The ignition is not sparking* – check all fittings.

The pilot will not stay on?

- *Debris around pilot* - Clean dirty area.
- *Loose connections* - Tighten connections.
- *Thermocouple bad* - Replace thermocouple.
- *Gas leak in line* - Check connections.
- *Lack of fuel pressure* - Tank near empty. Refill LPG tank.

The burner will not light?

- *Pressure is low* - Tank near empty. Refill LPG tank.
- *Opening blocked* - Remove and clean.
- *Control not ON* - Turn valve to ON.
- *Thermocouple bad* - Replace thermocouple.
- *Pilot light assembly bent* - Place pilot properly.
- *Not in correct location* - Position properly and retry.

If you have any queries or problems please email
sales@oxfordeventhire.co.uk or phone **01865 760158**.

We hope that our *Patio Heater* helps to make your event a success.
Please note that you can return the item to us dirty.

